


# SAM4S

---

ER-150II

## OPERATION MANUAL

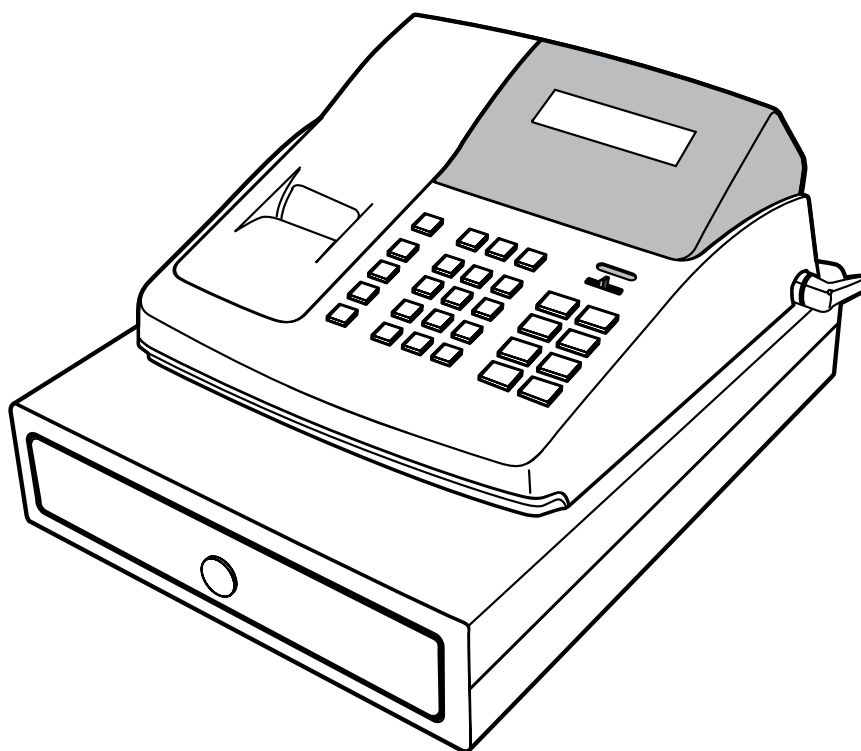

## ELECTRONIC CASH REGISTER

All specifications are subject to change without notice.



# TABLE OF CONTENTS

|   |           |
|---|-----------|
| <b>INITIAL SET UP INSTRUCTIONS.....</b>                               | <b>1</b>  |
| UNPACK THE CASH REGISTER.....   | 1         |
| CLEAR RANDOM ACCESS MEMORY (RAM) AND<br>INITIALIZE CASH REGISTER..... | 1         |
| LOAD PAPER .....  | 2         |
| HOW TO REPLACE THE INK ROLLER .....                                   | 3         |
| <b>FEATURES.....</b>  | <b>4</b>  |
| MODE SWITCH .....   | 4         |
| DISPLAY .....   | 4         |
| KEYBOARD .....  | 5         |
| KEY FUNCTIONS.....  | 5         |
| <b>PROGRAMMING .....</b>  | <b>7</b>  |
| TAX, DECIMAL POINT INFORMATION .....                                  | 7         |
| DEPARTMENT STATUS .....   | 7         |
| TAX RATE.....   | 8         |
| SETTING THE PERCENT (%) KEY .....                                     | 8         |
| SETTING THE MACHINE NUMBER .....                                      | 8         |
| RECEIPT PRINT / JOURNAL PRINT .....                                   | 9         |
| ROUNDING OPTION.....  | 9         |
| SYSTEM OPTIONS .....  | 10        |
| OPTION 1 .....  | 10        |
| OPTION 2 .....  | 10        |
| <b>SETTING THE DATE.....</b>  | <b>11</b> |
| <b>REGISTER MODE OPERATIONS .....</b>                                 | <b>11</b> |
| NO SALE OPERATIONS.....   | 12        |
| NON ADD NUMBER ENTRIES .....  | 12        |
| DEPARTMENT OPERATION .....  | 13        |
| MULTIPLE ITEM DEPARTMENT ENTRY.....                                   | 13        |
| SINGLE ITEM DEPARTMENT SALES.....                                     | 13        |
| MINUS (-) KEY OPERATION.....  | 14        |
| MULTIPLE MINUS OPERATION.....   | 14        |
| MINUS SINGLE OPERATION .....  | 14        |

|   |           |
|---|-----------|
| PERCENT DISCOUNT OPERATION .....              | 15        |
| PERCENT DISCOUNT ON ITEM .....                | 15        |
| PERCENT DISCOUNT ON ENTIRE SALE .....         | 15        |
| MERCHANDISE RETURN OPERATION .....            | 16        |
| VOID OPERATION .....                          | 16        |
| LAST ITEM VOID / ERROR CORRECT .....          | 16        |
| PREVIOUS ITEM VOID .....                      | 17        |
| TENDERING OPERATION .....                     | 17        |
| CASH TENDER .....                             | 17        |
| AMOUNT TENDERED ON CASH .....                 | 17        |
| CHARGE TENDER .....                           | 18        |
| SPLIT TENDER .....                            | 18        |
| RECEIVED ON ACCOUNT (RA) OPERATION .....      | 18        |
| PAID OUT (PO) OPERATION .....                 | 18        |
| CALCULATOR OPERATION .....                    | 19        |
| <b>MANAGEMENT REPORTS AND BALANCING .....</b> | <b>20</b> |
| CASH IN DRAWER DECLARATION .....              | 20        |
| FINANCIAL DAILY REPORT .....                  | 21        |
| P-T-D GRAND TOTAL REPORT .....                | 21        |
| SYSTEM BALANCING .....                        | 22        |
| <b>MAINTENANCE .....</b>                      | <b>22</b> |
| <b>SPECIFICATIONS .....</b>                   | <b>23</b> |
| DIMENSIONS .....                              | 23        |
| DRAWER .....                                  | 23        |
| MODE KEY .....                                | 23        |
| KEYBOARD .....                                | 23        |
| PRINTER .....                                 | 23        |
| DISPLAY .....                                 | 23        |
| POWER .....                                   | 23        |

# INITIAL SET UP INSTRUCTIONS

The following instructions describe how to unpack and start up the cash register.

---

 
## UNPACK THE CASH REGISTER

1. Unpack and unwrap cash register.
2. Locate in the packing the following items.
  - \* 1 roll of paper
  - \* 1 rewind spindle (for journal tape)

---

## CLEAR RANDOM ACCESS MEMORY (RAM) AND INITIALIZE CASH REGISTER

1. Place mode switch in **P** position.



2. Connect the AC plug into a power outlet **while pressing the "C" and "00" keys.**
3. Then, RAM is cleared and cash register prints the symbol ".....".


NOTE : This is a one time only procedure to be performed after the battery is installed.  
**DO NOT CLEAR RAM ONCE THE CASH REGISTER IS PROGRAMMED. TO DO SO WOULD CAUSE ALL PROGRAMS AND TOTALS TO BE LOST.**

---

## LOAD PAPER

1. Cut or tear the end of a single paper tape evenly for proper feeding through the print head.

2. Place paper roll in the paper holder and insert the paper end straight into the paper inlet of the printer.

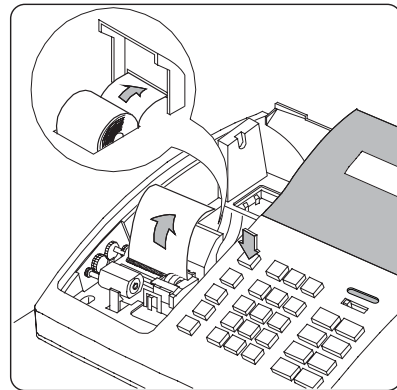


3. Depress the "**FEED**" key until the paper catches and advances through the printer.

4. If the paper does not feed through the printer, make sure the paper was entered properly, insert end of paper tape.

### FOR RECEIPT ONLY...

5. Pass the paper through the receipt window of the printer cover. Replace over printer compartment.

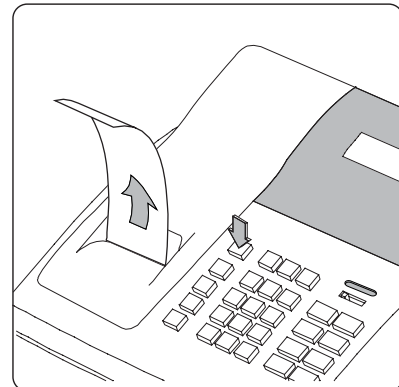


### FOR JOURNAL ONLY...

6. Route paper over top of paper guide insert in the slot of the take-up spool.

7. Press "**FEED**" key to wind paper securely onto spindle.

8. Replace printer cover.

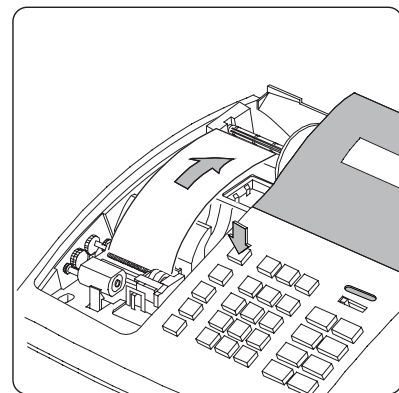


---

## HOW TO REPLACE THE INK ROLLER

The ink roller is a one-time article. Re-inking roller can cause damage to the printer and void warranty. Do not re-ink. When the print becomes faint, replace the ink roller as follows.

1. Remove the old roller by lifting of it.
2. Fit the new ink roller completely.

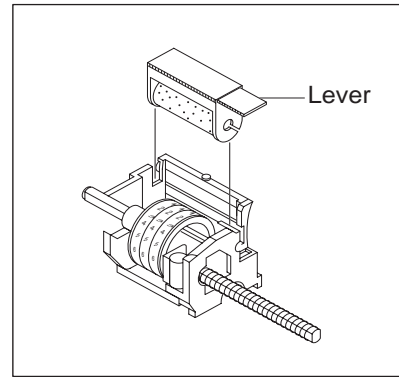

# FEATURES

---

## MODE SWITCH

**OFF** - Turns the cash register off. Any key can not be accessed.

**R** - To enter transaction.

**X** - To read financial report and C-I-D declaration.

**Z** - To read financial reports and reset totals to zero.

**P** - To program.

---

## DISPLAY

The display features fluorescent digits providing the customer with information about operation of the cash register. During operations, the display will show the following symbols. All these symbols appear in position

1 of the display.



1 2 3 4 5 6 7.8 9

**C** : Indicates the amount displayed is due in change.

**=** : Indicates the amount displayed is the a total.

**-** : Indicates the amount displayed is a negative.

**E** : Indicates an error condition.

Press the “**C**”key to clear error condition.

**S** : Indicates the amount displayed is a subtotal.





---

## KEYBOARD

|          |           |    |             |                  |              |
|----------|-----------|----|-------------|------------------|--------------|
| FEED     | RA<br>(+) | PO | X/RF<br>(x) | OFF R X Z P<br>█ |              |
| -<br>(-) | 7         | 8  | 9           | TAX              | #/NS         |
| %        | 4         | 5  | 6           | CALC             | CH           |
| VD       | 1         | 2  | 3           | DPT2             | SUB<br>TOTAL |
| C        | 0         | 00 | .           | DPT1             | CASH<br>(=)  |

---

## KEY FUNCTIONS

**FEED** Used to advance printer paper.

**0 - 9, 00** Used to enter the number.

**DPT1** These keys classify the items sold and  
**DPT2** memorize the quantities and amounts in  
 their own memories.

**X/RF** Used for multiplication entry. (X)  
 To allow for the return of merchandise by  
 department. (RF)

**PO** To register any money paid out.

**RA** To register any money received on account.

|                      |   |
|----------------------|---|
| <b>-</b>             | To register an amount minus or coupon.  |
| <b>%</b>             | To register a percent discount (-%) or surcharge (+%) on an item or on a sale.                                  |
| <b>VD</b>            | To correct entries before a sale is finalized.  |
| <b>C</b>             | To clear incorrect entries made on the numeric keys. Also to clear error conditions and silence the error tone. |
| <b>TAX</b>           | To program the tax rate in P mode. Also to enter the rate of tax in external straight tax method in R mode.     |
| <b>#/NS</b>          | To print the reference number or to open the cash drawer outside of a sale.                                     |
| <b>CH</b>            | To finalize the transaction in charge sales.  |
| <b>SUB<br/>TOTAL</b> | To obtain the subtotal of a sale.   |
| <b>CASH</b>          | To finalize cash sale and change calculation.   |
| <b>CALC</b>          | To start calculation mode in R MODE.  |
| <b>RA</b>            | To add (In the calculation mode).   |
| <b>X/RF</b>          | To multiply(In the calculation mode).   |
| <b>-</b>             | To subtract(In the calculation mode).   |
| <b>CASH</b>          | To Calculate and display result (In the calculation mode).  |

# PROGRAMMING

Read this entire section carefully to program the machine to the most preferable set-up according to your store system.

\* MODE SWITCH POSITION : P \*

## TAX, DECIMAL POINT INFORMATION

|    |    |      |
|----|----|------|
| N1 | N2 | X/RF |
|----|----|------|

|    | VALUE  |
|----|--|
| N1 | 0 = 2 decimal<br>1 = non decimal<br>2 = 1 decimal<br>3 = 3 decimal |
| N2 | 0 = VAT<br>1 = add-on tax<br>2 = external straight tax             |

## DEPARTMENT STATUS

|    |      |    |      |
|----|------|----|------|
| N1 | DPT1 | or | DPT2 |
|----|------|----|------|

| N1 | In case VAT, add-on tax | In case external straight tax |
|----|-------------------------|-------------------------------|
| 0  | Non single, non tax     | Non single                    |
| 1  | Non single, tax1        | Single                        |
| 2  | Non single, tax2        |                               |
| 3  | Single, non tax         |                               |
| 4  | Single, tax1            |                               |
| 5  | Single, tax2            |                               |

---

## TAX RATE

|    |    |    |    |    |    |     |
|----|----|----|----|----|----|-----|
| N1 | N2 | N3 | N4 | N5 | N6 | TAX |
|----|----|----|----|----|----|-----|

|       | VALUE          | COMMENTS              |
|-------|----------------|-----------------------|
| N1-N5 | 0.000 - 99.999 | Tax rate              |
| N6    | 0              | External straight tax |
|       | 1              | Tax1 (VAT or add-on)  |
|       | 2              | Tax2 (VAT or add-on)  |

---

## SETTING THE PERCENT(%) KEY

|    |    |    |    |    |    |   |
|----|----|----|----|----|----|---|
| N1 | N2 | N3 | N4 | N5 | N6 | % |
|----|----|----|----|----|----|---|

|       | VALUE          | COMMENTS     |
|-------|----------------|--------------|
| N1-N5 | 0.000 - 99.999 | Percent rate |
| N6    | 0              | -%           |
|       | 1              | +%           |

---

## SETTING THE MACHINE NUMBER

|    |    |      |
|----|----|------|
| N1 | N2 | #/NS |
|----|----|------|

2 DIGITS

---

## RECEIPT PRINT / JOURNAL PRINT

|    |    |                      |
|----|----|----------------------|
| N1 | N2 | <b>SUB<br/>TOTAL</b> |
|----|----|----------------------|

|    | VALUE | COMMENTS                      |
|----|-------|-------------------------------|
| N1 | 0     | Taxable, tax amount print     |
|    | 1     | Taxable, tax amount not print |
| N2 | 0     | Receipt Mode                  |
|    | 1     | Journal Mode                  |

## RECEIPT ON/OFF

|    |             |
|----|-------------|
| N1 | <b>CALC</b> |
|----|-------------|

|    | VALUE | COMMENTS    |
|----|-------|-------------|
| N1 | 0     | Receipt on  |
|    | 99    | Receipt off |

---

## ROUNDING OPTION

|    |   |
|----|---|
| N1 | - |
|----|---|

| N1 | COMMENTS                  |
|----|---------------------------|
| 0  | European Rounding Not use |
| 1  | European Rounding Use     |

## SYSTEM OPTIONS

### OPTION 1

|    |    |    |    |    |    |
|----|----|----|----|----|----|
| N1 | N2 | N3 | N4 | N5 | RA |
|----|----|----|----|----|----|

| NO | OPTION                                | VALUE = 0      | VALUE = 1  |
|----|---------------------------------------|----------------|------------|
| N1 | CASH DECLARATION                      | NOT COMPULSORY | COMPULSORY |
| N2 | ZERO SKIP IN REPORT                   | NOT SKIP       | SKIP       |
| N3 | Z REPORT REPEAT                       | NOT REPEAT     | REPEAT     |
| N4 | RF / VD / GROSS TOTAL PRINT IN REPORT | PRINT          | NOT PRINT  |
| N5 | SUBTOTAL PRINT                        | PRINT          | NOT PRINT  |

### OPTION 2

|    |    |    |    |    |    |
|----|----|----|----|----|----|
| N1 | N2 | N3 | N4 | N5 | PO |
|----|----|----|----|----|----|

| NO | OPTION                            | VALUE = 0 | VALUE = 1 |
|----|-----------------------------------|-----------|-----------|
| N1 | GRAND TOTAL TO PRINT              | PRINT     | NOT PRINT |
| N2 | GRAND TOTAL RESET AFTER Z REPORT  | NOT RESET | RESET     |
| N3 | Z COUNTER RESET AFTER Z REPORT    | NOT RESET | RESET     |
| N4 | CONSECUTIVE NUMBER AFTER Z REPORT | NOT RESET | RESET     |
| N5 | DATE PRINT                        | PRINT     | NOT PRINT |


---

## SETTING THE DATE

- SET MODE SWITCH TO THE "P" POSITION.


To program the time, press the 4 digit number keys then press the "CASH" key.

To program the date, press 6 digit number keys then press the "CH" key.

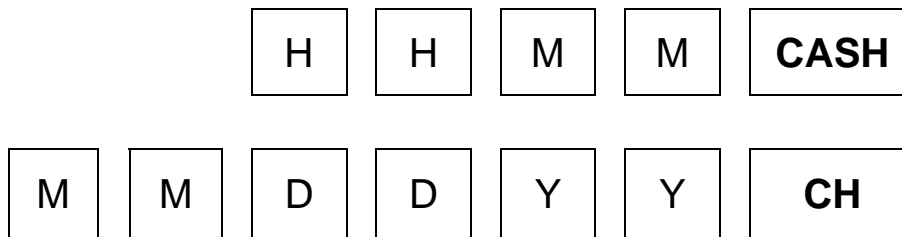

Ex) TO DATE TO BE PROGRAMMED IS OCTOBER  
9,2006

TO TIME TO BE PROGRAMMED IS 17:25

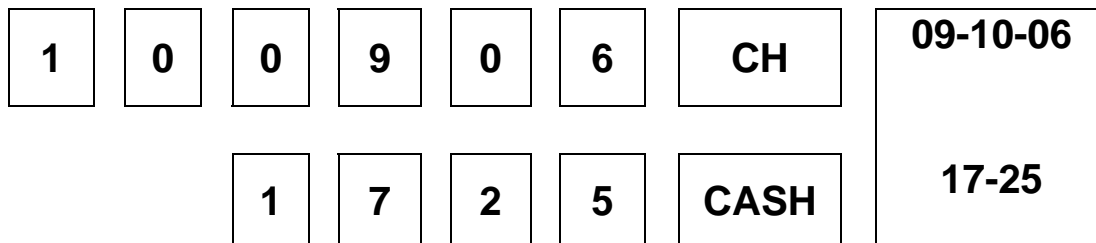

---

## REGISTER MODE OPERATION EXAMPLES

- MODE SWITCH SET TO "R" POSITION

This section provides examples of practice in the register mode. When an error occurs, the symbol "E" will appear on the display accompanied by an error tone. Clear this error condition by pressing the "C" key.

The Error prompt may indicate an incorrect key has been entered, or a compulsory function has been performed.



## SAMPLE RECEIPT

| VAT version     | Add - on tax version |
|-----------------|----------------------|
| <b>09-10-06</b> | <b>09-10-06</b>      |
| <b>1.00TX1</b>  | <b>1.00TX1</b>       |
| <b>2.00NT2</b>  | <b>2.00NT2</b>       |
| <b>3.00CA</b>   | <b>1.00TX</b>        |
| <b>1.00TX</b>   | <b>0.05TX</b>        |
| <b>0.04TX</b>   | <b>2.00NT</b>        |
| <b>2.00NT</b>   | <b>0.12NT</b>        |
| <b>0.11NT</b>   | <b>3.00CA</b>        |
| <b>001-77</b>   | <b>001-77</b>        |

- Following example are based on VAT version.

---

## NO SALE OPERATION

A no sales operation opens the cash drawer outside of a sale. The financial report records the no sale activity counter.

|             |                 |
|-------------|-----------------|
| <b>#/NS</b> | <b>..... NS</b> |
|             | <b>002-77</b>   |

---

## NON ADD NUMBER ENTRIES

The **"#/NS"** key can be used to enter up 7 digits. The entry can be made prior to any operation in the register mode. This numeric entry will not add to any activity counts or totals.

|                 |          |          |          |          |          |          |             |
|-----------------|----------|----------|----------|----------|----------|----------|-------------|
| <b>1</b>        | <b>2</b> | <b>3</b> | <b>4</b> | <b>5</b> | <b>6</b> | <b>7</b> | <b>#/NS</b> |
| <b>12345.67</b> |          |          |          |          |          |          | <b>#</b>    |

---

## DEPARTMENT OPERATION

### MULTIPLE ITEM DEPARTMENT ENTRY

|   |   |              |  |
|---|---|--------------|--|
| 1 | 5 | X/RF         | 15 X<br>2.00<br>30.00TX1<br>31.00CA<br>31.00TX<br>1.42TX |
| 2 | 0 | DPT1         |  |
|   |   | CASH<br>TEND |  |
|   |   |              |  |

### SINGLE ITEM DEPARTMENT SALES

NOTE : Even if a department is programmed as single item, the department is not processed as a single sale in case of another department had entered already.

|   |   |      |  |
|---|---|------|--|
| 1 | 0 | X/RF | 10 X<br>1.00<br>10.00NT2<br>10.00CA<br>10.00NT<br>0.56NT |
| 1 | 0 | DPT2 |  |
|   |   |      |  |
|   |   |      |  |

---

## MINUS (-) KEY OPERATION

### MULTIPLE MINUS OPERATION

|   |   |   |              |  |
|---|---|---|--------------|--|
| 5 | 0 | 0 | DPT1         | 5.00TX1<br>15 X<br>-0.50 -<br>-7.50 -<br>-2.50CA<br>5.00TX<br>0.23TX |
|   | 1 | 5 | X/RF         |  |
|   | 5 | 0 | -            |  |
|   |   |   | CASH<br>TEND |  |
|   |   |   |              |  |

### MINUS SINGLE OPERATION

|   |   |   |              |                    |
|---|---|---|--------------|--------------------|
| 2 | 0 | 0 | -            | -2.00 -<br>-2.00CA |
|   |   |   | CASH<br>TEND |                    |

---

## PERCENT OPERATION (%)

### PERCENT DISCOUNT ON ITEM

|   |   |   |              |  |
|---|---|---|--------------|--|
| 5 | 0 | 0 | DPT1         | 5.00TX1<br>3.000 %-<br>-0.15<br>4.85CA<br>5.00TX<br>0.23TX |
|   |   |   | %            |  |
|   |   |   | CASH<br>TEND |  |
|   |   |   |              |  |

### PERCENT DISCOUNT ON ENTIRE SALE

|   |   |   |              |   |
|---|---|---|--------------|---|
| 1 | 0 | 0 | DPT1         | 1.00TX1<br>2.00NT2<br>3.00ST<br>3.000 %-<br>-0.09<br>2.91CA<br>1.00TX<br>0.04TX<br>2.00NT<br>0.11NT |
| 2 | 0 | 0 | DPT2         |   |
|   |   |   | SUB<br>TOTAL |   |
|   |   |   | %            |   |
|   |   |   | CASH<br>TEND |   |
|   |   |   |              |   |
|   |   |   |              |   |

---

## MERCHANDISE RETURN OPERATION

|   |   |   |      |
|---|---|---|------|
| 2 | 0 | 0 | DPT1 |
|---|---|---|------|

|      |
|------|
| X/RF |
|------|

|   |   |   |      |
|---|---|---|------|
| 2 | 0 | 0 | DPT1 |
|---|---|---|------|

|   |   |   |      |
|---|---|---|------|
| 3 | 0 | 0 | DPT2 |
|---|---|---|------|

|              |
|--------------|
| CASH<br>TEND |
|--------------|

|          |
|----------|
| 2.00TX1  |
| .....RF  |
| -2.00TX1 |
| 3.00NT2  |
| 3.00CA   |
| 3.00NT   |
| 0.16NT   |

---

## VOIDING ENTRIES (VD)

### LAST ITEM VOID / ERROR CORRECT

|   |   |   |      |
|---|---|---|------|
| 1 | 0 | 0 | DPT1 |
|---|---|---|------|

|   |   |   |      |
|---|---|---|------|
| 2 | 0 | 0 | DPT2 |
|---|---|---|------|

|    |
|----|
| VD |
|----|

|              |
|--------------|
| CASH<br>TEND |
|--------------|

|          |
|----------|
| 1.00TX1  |
| 2.00NT2  |
| .....VD  |
| -2.00NT2 |
| 1.00CA   |
| 1.00TX   |
| 0.04TX   |

### PREVIOUS ITEM VOID

|   |   |   |              |
|---|---|---|--------------|
| 1 | 0 | 0 | DPT1         |
| 2 | 0 | 0 | DPT2         |
| 1 | 0 | 0 | VD           |
|   |   |   | DPT1         |
|   |   |   | CASH<br>TEND |

|          |
|----------|
| 1.00TX1  |
| 2.00NT2  |
| .....VD  |
| -1.00TX1 |
| 2.00CA   |
| 2.00NT   |
| 0.11NT   |

### TENDERING OPERATION

#### CASH TENDER

|   |   |   |              |
|---|---|---|--------------|
| 1 | 0 | 0 | DPT1         |
|   |   |   | CASH<br>TEND |

|         |
|---------|
| 1.00TX1 |
| 1.00CA  |
| 1.00TX  |
| 0.04TX  |

#### AMOUNT TENDERED ON CASH

|   |   |   |              |
|---|---|---|--------------|
| 2 | 0 | 0 | DPT1         |
| 3 | 0 | 0 | CASH<br>TEND |

|         |
|---------|
| 2.00TX1 |
| 2.00 TA |
| 3.00AT  |
| 1.00CG  |
| 2.00TX  |
| 0.09TX  |

## CHARGE TENDER

- Amount tender operation is impossible on the charge tender.

|   |   |   |      |                                       |
|---|---|---|------|---------------------------------------|
| 3 | 0 | 0 | DPT1 | 3.00TX1<br>3.00CH<br>3.00TX<br>0.14TX |
|   |   |   | CH   |                                       |

## SPLIT TENDER

The cash drawer should not open during split tender.

|   |   |   |              |   |
|---|---|---|--------------|---|
| 4 | 0 | 0 | DPT1         | 4.00TX1<br>4.00 TA<br>2.00AT<br><br>2.00 TA<br>2.00CH<br>4.00TX<br>0.19TX |
| 2 | 0 | 0 | CASH<br>TEND |   |
|   |   |   | CH           |   |
|   |   |   |              |   |

---

## RECEIVED ON ACCOUNT (RA) OPERATION

|   |   |   |    |        |
|---|---|---|----|--------|
| 7 | 0 | 0 | RA | 7.00RA |
|---|---|---|----|--------|

---

## PAID OUT (PO) OPERATION


|   |   |   |    |        |
|---|---|---|----|--------|
| 5 | 0 | 0 | PO | 5.00PO |
|---|---|---|----|--------|

---

## CALCULATOR OPERATION

Turn the mode switch to "R" MODE and press "CALC" key.  
To exit from Calculator mode, Press "C" key or Turn the mode switch.

RA : +  
- : -  
X/RF : X  
CASH/TEND : =

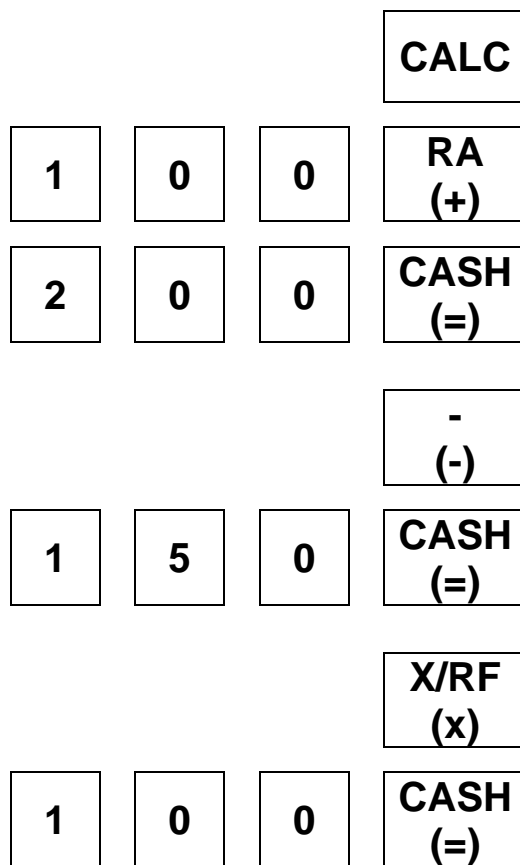

**100 + 200 = 300**  
**- 150 = 150**  
**x 100 = 15000**



## MANAGEMENT REPORTS AND BALANCING

| MODE     | REPORT                     | KEY                      | COMMENTS         |
|----------|----------------------------|--------------------------|------------------|
| <b>X</b> | CASH IN DRAWER DECLARATION | <b>AMOUNT - SUBTOTAL</b> | AMOUNT = NUMERIC |
| <b>X</b> | FINANCIAL DAILY REPORT     | <b>CASH TEND</b>         | READ             |
| <b>Z</b> |                            |                          | READ & RESET     |
| <b>X</b> | P-T-D GRAND                | <b>CH</b>                | READ             |
| <b>Z</b> | TOTAL                      |                          | READ & RESET     |

---

### CASH IN DRAWER DECLARATION

In the system option 1 programming, cash-in-drawer declaration can be programmed compulsory. Cash-in-drawer declaration is performed by adding the total of each type of media in the drawer, and pressing the "**SUBTOTAL**" key. Depression of the "**SUBTOTAL**" key with numeric will enter the information that the cash-in-drawer declaration performed, and reports in X position and Z position will be allowed.

In this case, the difference of input amount and cash in drawer is displayed.

After this declaration, you can not take any registering operation, if not reporting in X mode or Z mode.

|                 |                            |
|-----------------|----------------------------|
| <b>09-10-06</b> |                            |
| <b>70.00CA</b>  | TOTAL ENTERED BY KEY-INPUT |
| <b>70.26AT</b>  | TOTAL IN CASH DRAWER       |
| <b>-0.26</b>    | DIFFERENCE                 |
| <b>021-77</b>   |                            |

# FINANCIAL DAILY REPORT

|                |                                 |
|----------------|---------------------------------|
| 09-10-06 17-35 | DATE                            |
| 1 Z            | Z COUNTER, MODE SWITCH POSITION |
| 024 @          | DEPARTMENT1 COUNTER             |
| 53.00TX1       | DEPARTMENT1 TOTAL               |
| 025 @          | DEPARTMENT2 COUNTER             |
| 30.00 2        | DEPARTMENT2 TOTAL               |
| 53.00TX        | TAXABLE1 TOTAL                  |
| 2.47TX         | TAX1 TOTAL                      |
| 30.00NT        | TAXABLE2 TOTAL                  |
| 1.66NT         | TAX2 TOTAL                      |
| -0.24 %-       | PERCENT TOTAL                   |
| -9.50 -        | (-) TOTAL                       |
| 73.26 * 1      | NET SALES TOTAL                 |
| -2.00RF        | RETURN MERCHANDISE TOTAL        |
| -3.00VD        | VOID TOTAL                      |
| 85.00 * 2      | GROSS SALES TOTAL               |
| 016 #          | CUSTOMER COUNTER                |
| 68.26CA        | CASH TOTAL                      |
| 5.00CH         | CHARGE TOTAL                    |
| 7.00RA         | RECEIVED ON ACCOUNT             |
| 5.00PO         | PAID OUT                        |
| 70.26AT        | CASH IN DRAWER                  |
| 001 NS         | NO SALE COUNTER                 |
| .....          |                                 |
| 85.00 * 3      | GRAND TOTAL                     |
| 064-01         | RECEIPT NUMBER, MACHINE NUMBER  |

# P-T-D GRAND TOTAL REPORT

|          |                   |
|----------|-------------------|
| 001 *Z   |                   |
| 85.00 *4 | P-T-D GRAND TOTAL |

---

## SYSTEM BALANCING

NET SALES TOTAL = DEPARTMENT TOTALS  
(add positive, subtract  
negative)  
+ TAX TOTAL (add-on,  
external straight tax version  
only)  
+ % TOTAL  
+ (-) TOTAL

GROSS SALES TOTAL = NET SALES TOTAL  
- MERCHANDISE RETURN  
- (-) TOTAL  
- % TOTAL

ENDING GRAND TOTAL = GROSS SALES TOTAL  
+ PREVIOUS GRAND  
TOTAL

## MAINTENANCE

1. Avoid excess dust and extreme temperatures.
2. Be certain that AC cord is inserted firmly in the outlet,  
and that cord poses no danger of accidental tripping.
3. Use no chemicals or abrasives while cleaning cabinet  
or keyboard.
4. Do not pull or hold paper while the register is printing.

# SPECIFICATION

---

## DIMENSIONS

|            |                             |
|------------|-----------------------------|
| REG. SIZE  | 325 mmW × 420 mmL × 225 mmH |
| NET WEIGHT | 5.3 kg                      |

---

## DRAWER

|        |                            |
|--------|----------------------------|
| SIZE   | 325 mmW × 420 mmL × 95 mmH |
| WEIGHT | 3.3 kg                     |

---

## MODE KEY

|                  |                     |
|------------------|---------------------|
| LOCK SWITCH      | SLIDE SWITCH        |
| POSITIONS        | 5 (OFF, R, X, Z, P) |
| RECEIPT ON / OFF | NONE (BY PROGRAM)   |

---

## KEYBOARD

|                  |                     |
|------------------|---------------------|
| TYPE             | RUBBER CONTACT TYPE |
| NUMBER OF KEYS   | 28                  |
| KEYSTROKE BUFFER | 20                  |

---

## PRINTER

|             |                                       |
|-------------|---------------------------------------|
| MODEL #     | M-42V                                 |
| STATIONS    | 1                                     |
| PAPER       | SINGLE PLY(57.5 mm)                   |
| COPY        | NONE                                  |
| PRINT SPEED | 2.2 LINE / SECOND (7 Column printing) |

---

## DISPLAY

|          |                   |
|----------|-------------------|
| CAPACITY | 9 DIGITS          |
| SYMBOLS  | 5 (E, C, -, =, S) |

---

## POWER

|                |  |
|----------------|--|
| INPUT          | AC LOCAL VOLTAGE $\pm 10\%$ , 50 / 60 Hz |
| CONSUMPTION    | STANDBY : 2W, MAX : 8W                   |
| MEMORY BACK-UP | 60 DAYS                                  |
| BATTERY        | MS LITHIUM 3.0V 11mAh                    |

---